

GOODWE



User Manual

Grid-Tied PV Inverter

DNS Series
(3.0-6.0kW) G3

V2.2-2025-11-27

Trademarks

GOODWE and other GOODWE trademarks are trademarks of GoodWe Technologies Co.,Ltd. All other trademarks or registered trademarks mentioned in this manual are owned by GoodWe Technologies Co.,Ltd.

NOTICE

The information in this user manual is subject to change due to product updates or other reasons. This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.

CONTENT

- 1 About This Manual1**
 - 1.1 Applicable Model1
 - 1.2 Target Audience1
 - 1.3 Symbol Definition2
- 2 Safety Precaution3**
 - 2.1 General Safety3
 - 2.2 DC Side3
 - 2.3 AC Side3
 - 2.4 Inverter Installation4
 - 2.5 Personal Requirements4
 - 2.6 EU Declaration of Conformity5
- 3 Product Introduction6**
 - 3.1 Application Scenarios6
 - 3.2 Circuit Diagram6
 - 3.3 Supported Grid Types6
 - 3.4 Features7
 - 3.5 Appearance10
 - 3.5.1 Parts10
 - 3.5.2 Dimensions11
 - 3.5.3 Indicators11
 - 3.5.4 Nameplate12
- 4 Check and Storage13**
 - 4.1 Check Before Receiving13
 - 4.2 Deliverables13
 - 4.3 Storage14
- 5 Installation15**
 - 5.1 Installation Requirements15
 - 5.2 Inverter Installation18
 - 5.2.1 Moving the Inverter18
 - 5.2.2 Installing the Inverter18

| | | |
|-----------|---|-----------|
| 6 | Electrical Connection | 19 |
| 6.1 | Safety Precaution | 19 |
| 6.2 | Connecting the PE Cable | 19 |
| 6.3 | Connecting the PV Input Cable | 20 |
| 6.4 | Connecting the AC Output Cable | 22 |
| 6.5 | Communication | 25 |
| 6.5.1 | Communication Network Introduction | 25 |
| 6.5.2 | Connecting the Communication Cable | 26 |
| 6.5.3 | Installing the Communication Module | 29 |
| 6.5.4 | Connect USB-RS485 adapter cable | 29 |
| 7 | Equipment Commissioning | 30 |
| 7.1 | Check Before Power ON | 30 |
| 7.2 | Power On | 30 |
| 8 | System Commissioning | 31 |
| 8.1 | Indicators and Buttons | 31 |
| 8.2 | Setting Inverter Parameters via LCD | 32 |
| 8.2.1 | LCD Menu Introduction | 33 |
| 8.2.2 | Inverter Parameter Introduction | 34 |
| 8.3 | Upgrading the Firmware Via USB Flash Disk | 35 |
| 8.4 | Setting Inverter Parameters via SolarGo App | 35 |
| 9 | Maintenance | 36 |
| 9.1 | Power Off the Inverter | 36 |
| 9.2 | Removing the Inverter | 36 |
| 9.3 | Disposing of the Inverter | 36 |
| 9.4 | Troubleshooting | 36 |
| 9.5 | Routine Maintenance | 43 |
| 10 | Technical Parameters | 44 |
| 11 | Term Explanation | 53 |

1 About This Manual

This manual describes the product information, installation, electrical connection, commissioning, troubleshooting, and maintenance. Read through this manual before installing and operating the product. All the installers and users have to be familiar with the product features, functions, and safety precautions. This manual is subject to update without notice. For more product details and latest documents, visit <https://en.goodwe.com>.

1.1 Applicable Model

This manual applies to the listed inverters below (DNS for short):




| Model | Nominal Output Power | Nominal Output Voltage |
|-----------------|----------------------|------------------------|
| GW3000-DNS-30 | 3kW | 220/230/240V |
| GW3600-DNS-30 | 3.6kW | |
| GW4200-DNS-30 | 4.2kW | |
| GW5000-DNS-30 | 5kW | |
| GW6000-DNS-30 | 6kW | |
| GW5000-DNS-B30 | 5kW | |
| GW6000-DNS-B30 | 6kW | |
| GW5000-DNS-EU30 | 5kW | |

1.2 Target Audience

This manual applies to trained and knowledgeable technical professionals. The technical personnel has to be familiar with the product, local standards, and electric systems.

1.3 Symbol Definition

Different levels of warning messages in this manual are defined as follows:

| |
|--|
|  DANGER |
| Indicates a high-level hazard that, if not avoided, will result in death or serious injury. |
|  WARNING |
| Indicates a medium-level hazard that, if not avoided, could result in death or serious injury. |
|  CAUTION |
| Indicates a low-level hazard that, if not avoided, could result in minor or moderate injury. |
| NOTICE |
| Highlight and supplement the texts. Or some skills and methods to solve product-related problems to save time. |

2 Safety Precaution

Notice

The inverters are designed and tested strictly complies with related safety rules. Read and follow all the safety instructions and cautions before any operations. Improper operation might cause personal injury or property damage as the inverters are electrical equipment.

2.1 General Safety

Notice

- The information in this user manual is subject to change due to product updates or other reasons. This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.
- Before installations, read through the quick installation guide. For additional information, please see the user manual.
- All installations should be performed by trained and knowledgeable technicians who are familiar with local standards and safety regulations.
- Use insulating tools and wear personal protective equipment when operating the equipment to ensure personal safety. Wear anti-static gloves, cloths, and wrist strips when touching electron devices to protect the inverter from damage.
- Strictly follow the installation, operation, and configuration instructions in this manual. The manufacturer shall not be liable for equipment damage or personal injury if you do not follow the instructions. For more warranty details, please visit <https://en.goodwe.com/warranty>.

2.2 DC Side

DANGER

Connect the DC cables using the delivered PV connectors. The manufacturer shall not be liable for the equipment damage if other connectors or terminals are used.

WARNING


- Ensure the component frames and the bracket system are securely grounded.
- Ensure the DC cables are connected tightly, securely and correctly.
- Measure the DC cable using the multimeter to avoid reverse polarity connection. Also, the voltage should be under the permissible range.

2.3 AC Side









WARNING

- The voltage and frequency at the connection point meet the inverter grid connection requirements
- Additional protective devices like circuit breakers or fuses are recommended on the AC side. Specification of the protective device should be at least 1.25 times the Max. Output Current.
- Make sure that all the groundings are tightly connected.
- You are recommended to use copper cables as AC output cables. Contact the manufacturer if you want to use other cables.

2.4 Inverter Installation

 **DANGER**

- Do not apply mechanical load to the terminals, otherwise the terminals can be damaged.
- All labels and warning marks should be visible after the installation. Do not scrawl, damage, or cover any label on the device.
- Inverters should not be installed in multiple phase combination.
- Warning labels on the inverter are as follows.

| | | | |
|---|--|---|--|
|  | DANGER High voltage hazard. Disconnect all incoming power and turn off the product before working on it. |  | Delayed discharge. Wait 5 minutes after power off until the components are completely discharged. |
|  | Read through the user manual before working on this device. |  | Potential risks exist. Wear proper PPE before any operations. |
|  | High-temperature hazard. Do not touch the product under operation to avoid being burnt. |  | Grounding point. |
|  | CE Mark |  | Do not dispose of the inverter as household waste. Discard the product in compliance with local laws and regulations, or send it back to the manufacturer. |

2.5 Personal Requirements

NOTICE

- Personnel who install or maintain the equipment must be strictly trained, learn about safety precautions and correct operations.
- Only qualified professionals or trained personnel are allowed to install, operate, maintain, and replace the equipment or parts.

2.6 EU Declaration of Conformity

GoodWe Technologies Co., Ltd. hereby declares that the inverter with wireless communication modules sold in the European market meets the requirements of the following directives:

- Radio Equipment Directive 2014/53/EU (RED)
- Restrictions of Hazardous Substances Directive 2011/65/EU and (EU) 2015/863 (RoHS)
- Waste Electrical and Electronic Equipment 2012/19/EU
- Registration, Evaluation, Authorization and Restriction of Chemicals (EC) No 1907/2006 (REACH)

GoodWe Technologies Co., Ltd. hereby declares that the inverter without wireless communication modules sold in the European market meets the requirements of the following directives:


- Electromagnetic compatibility Directive 2014/30/EU (EMC)
- Electrical Apparatus Low Voltage Directive 2014/35/EU (LVD)
- Restrictions of Hazardous Substances Directive 2011/65/EU and (EU) 2015/863 (RoHS)
- Waste Electrical and Electronic Equipment 2012/19/EU
- Registration, Evaluation, Authorization and Restriction of Chemicals (EC) No 1907/2006 (REACH)

You can download the EU Declaration of Conformity on <https://en.goodwe.com>.


3 Product Introduction

3.1 Application Scenarios

The DNS G3 inverter is a single-phase PV string grid-tied inverter. The inverter converts the DC power generated by the PV module into AC power and feeds it into the utility grid. The intended use of the inverter is as follows:

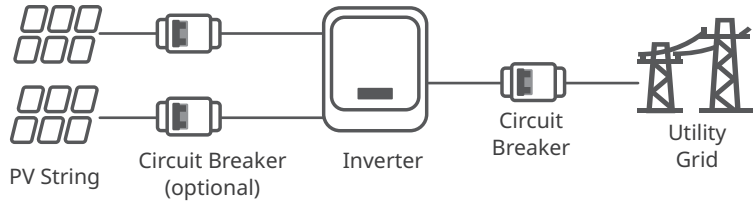


3.2 Circuit Diagram

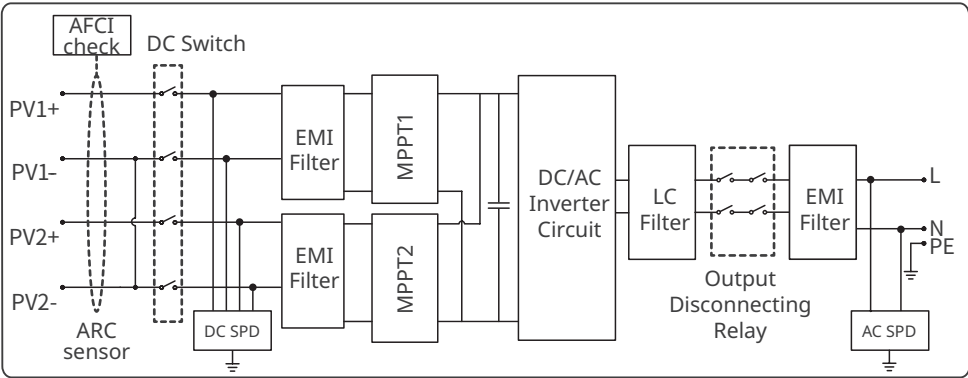

3.3 Supported Grid Types

For the grid type with neutral wire, the N to ground voltage must be less than 10V.

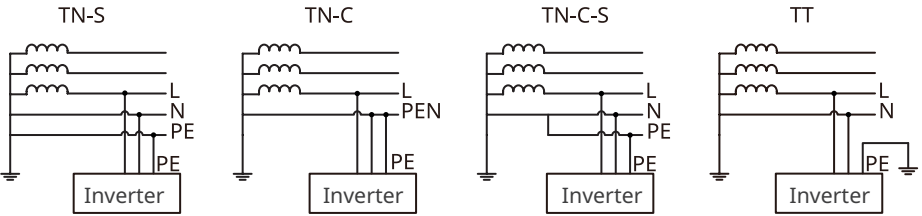

3.4 Features

NOTICE

For specific inverter functions, please refer to the actual model configuration.

Power derating

In order to ensure the safe operation of the inverter and meet local safety regulations, the inverter will automatically reduce the output power when the operating environment is not ideal. The following are the factors that may occur power derating. Please try to avoid them when the inverter is working.

The inverter will shutdown for protection until the AFCI alarms are cleared. After clearing the alarms, the inverter can automatically reconnect to the grid.

- Unfavorable environmental conditions, e.g., direct sunlight, high temperature, etc.
- Inverter's output power percentage has been set.
- Changes in grid voltage and frequency.
- Higher input voltage value.
- Higher input current value.

AFCI Detection

Reasons to occur electric arcs.

- Damaged connectors in the PV or battery system.
- Wrong connected or broken cables.
- Aging connectors and cables.

Methods to detect electric arcs

- The inverter has an integrated AFCI function satisfies IEC63027.
- When the inverter detects an electric arc, users can find the time of the fault and the detailed phenomenon through the app.
- The inverter will shutdown for protection until the AFCI alarms are cleared. After clearing the alarms, the inverter can automatically reconnect to the grid.
 - Automatic reconnection: The alarm can be cleared automatically in 5 minutes if the inverter triggers a fault for less than 5 times within 24 hours.
 - Manual reconnection: The inverter will shutdown for protection after the 5th electric arc fault within 24 hours. The inverter cannot work normally until the fault is solved. Please refer to the SolarGo App User Manual for detailed operations.


The AFCI function is disabled by default at the factory. To use it, please enable the "AFCI Detection" function through the "Advanced Settings" interface in the SolarGo App.

| Model | Tag | Description |
|-----------------|----------------|---|
| GW3000-DNS-30 | F-I-AFPE-1-2-1 | F: Full coverage I: Integrated AFPE: Detection and interruption capability provided 1: 1 monitored string per input port 2: 2 input ports per channel 1: 1 monitored channel |
| GW3600-DNS-30 | | |
| GW4200-DNS-30 | | |
| GW5000-DNS-30 | | |
| GW6000-DNS-30 | | |
| GW5000-DNS-B30 | | |
| GW6000-DNS-B30 | | |
| GW5000-DNS-EU30 | | |

Communications

The inverter supports parameter setting via Bluetooth, connecting to the SEMS monitoring platform via 4G, WiFi or LAN , etc, thus monitoring the operations of the inverter and the power plant, etc.

- Bluetooth: meets Bluetooth 5.1 standard.
- WiFi: Wireless IEEE 802.11 b/g/n @2.4 GHz.
- LAN: Ethernet with 10M/100Mbps adaptive speed.
- 4G (Optional): It supports connecting to the monitoring platform via 4G communication.

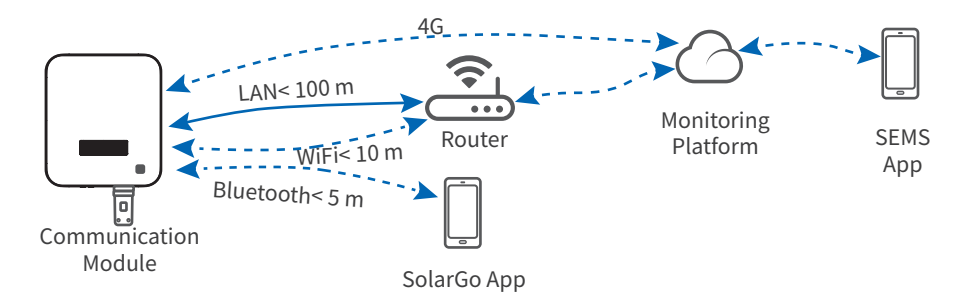


Load Control

The inverter reserves a dry contact control port to support the connection of SG Ready certified heat pumps and controllable loads, which is used to turn on or off the loads.

The load control methods are as follows:

- Switch mode: You can control the opening and closing of the load through the "switch" button.
- Time setting mode: You can set the time to turn on or off the loads, and the loads will be turned on or off automatically within the set time period.
- Power setting mode: You can set a power value by yourself. When the output power of the inverter exceeds the set value, the load will turn on.

The load control function is disabled by default. If you need to use it, please enable and set the "Load Control" function through the "More" interface on the SolarGo App.

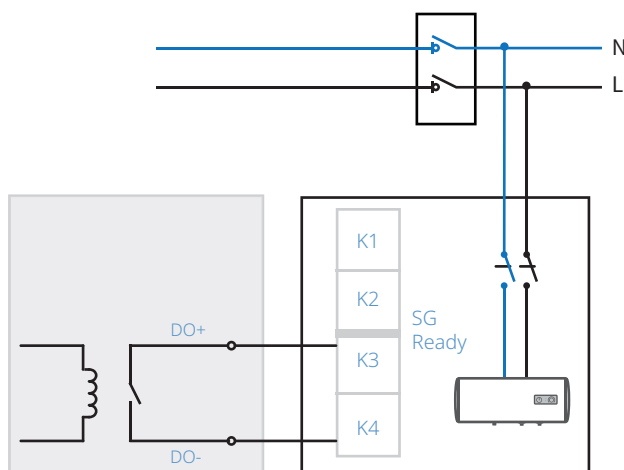

24h Load Monitoring


The smart meter measures the data of the grid side and transmits it to the inverter. The inverter transmits the grid side date and the power generation date to the monitoring platform via a communication module, and then monitoring platform calculates the load power consumption and the 24H load monitoring is realized.

Power Supply at Night

When the PV modules stop working due to insufficient sunlight at night, the inverter can take power from the grid side to achieve functions such as night monitoring and remote upgrading at night.


3.5 Appearance

3.5.1 Parts

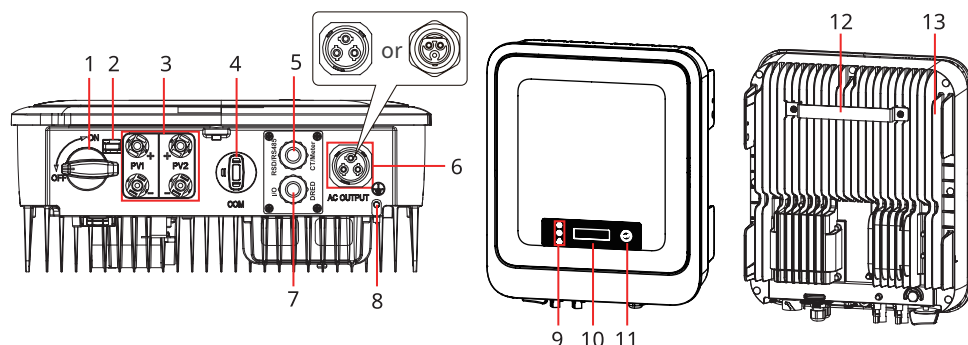





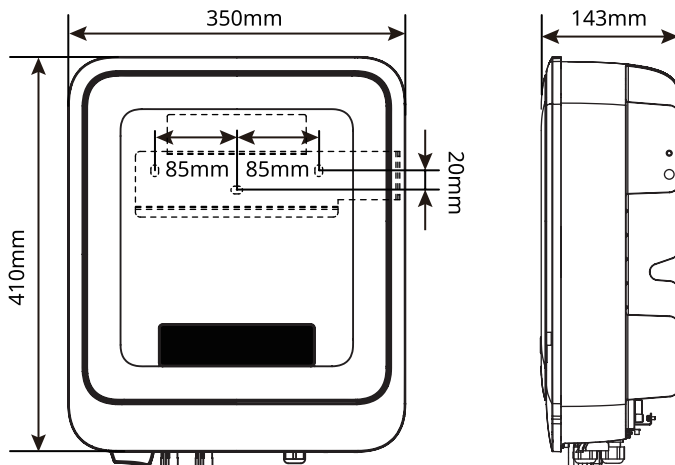








| No. | Parts | Description |
|-----|--|--|
| 1 | DC Switch | Start or stop DC input. |
| 2 | DC Switch Lock | Only for Australia. Turn the DC switch to OFF and lock it to avoid electric shock when you have to work on the inverter. |
| 3 | PV Input Terminal | Used to connect the PV module DC input cables. |
| 4 | COM Port for communication module, USB-RS485 cable or USB. | <ul style="list-style-type: none"> Connect a communication module like Bluetooth , WiFi, WiFi/LAN or 4G , etc. The module type may differ depending on actual needs. Connect the USB-RS485 cable in Brazil. Update the software version of the inverter using a USB flash driver. |
| 5 | COM Port for RS485, remote shutdown, meter, or CT. | Used to connect the RS485, meter, CT, or remote shutdown communication cable. |
| 6 | AC Terminal | Used to connect the AC output cable, which connects the inverter and the utility grid. |
| 7 | COM Port for DRED or dry contact. | Reserved port. Used to connect the DRED cable or dry contact cable. |
| 8 | Grounding Point | Used to connect the PE cable. |
| 9 | Indicator | Indicates working state of the inverter. |
| 10 | LCD (optional) | Optional. Used to check the parameters of the inverter. |
| 11 | Button (optional) | Optional. Used to select menus displayed on the screen. |
| 12 | Mounting Plate | Used to install the inverter. |
| 13 | Heat sink | Used to cool the inverter. |

3.5.2 Dimensions





















3.5.3 Indicators

With LCD

| Indicator | Status | Description |
|---|---|---|
|  Power |  | ON = Wi-Fi IS CONNECTED/ACTIVE |
| |  | BLINK 1 = Wi-Fi SYSTEM IS RESETING |
| |  | BLINK 2 = NOT CONNECTED TO THE ROUTER |
| |  | BLINK 4 = Wi-Fi SERVER PROBLEM |
| |  | BLINK = RS485 IS CONNECTED |
| |  | OFF = Wi-Fi IS NOT ACTIVE |
|  Operating |  | ON = THE INVERTER IS FEEDING POWER |
| |  | OFF = THE INVERTER IS NOT FEEDING POWER AT THE MOMENT |
|  Faulty |  | ON = A FAULT HAS OCCURRED |
| |  | OFF = NO FAULT |

Without LCD

| Indicators | Status | Description |
|--|---|---|
|  Power |  | ON= EQUIPMENT POWER ON |
| |  | OFF= EQUIPMENT POWER OFF |
|  Operating |  | ON= THE INVERTER IS FEEDING POWER |
| |  | OFF= THE INVERTER IS NOT FEEDING POWER |
| |  | SINGLE SLOW FLASH= SELF CHECK BEFORE CONNECTING TO THE GRID |
| |  | SINGLE FLASH = CONNECTING TO THE GRID |

| Indicators | Status | Description |
|---|---|---------------------------------------|
|  SEMS |  | ON= WIRELESS IS CONNECTED/ACTIVE |
| |  | BLINK 1 = WIRELESS SYSTEM IS RESETING |
| |  | BLINK 2 = WIRELESS ROUTER PROBLEM |
| |  | BLINK 4 = WIRELESS SERVER PROBLEM |
| |  | BLINK = RS485 IS CONNECTED |
| |  | OFF= WIRELESS IS NOT ACTIVE |
|  Faulty |  | ON= A FAULT HAS OCCURRED |
| |  | OFF= NO FAULT |

3.5.4 Nameplate

The nameplate is for reference only.

GOODWE

Product: Grid-Tied PV Inverter
Model : *****_***_**

| | |
|----------|----------------------|
| PV Input | UDCmax: **** Vd.c. |
| | UMPP: **...*** Vd.c. |
| | IDC,max: ** Ad.c. |
| | ISC PV: ** Ad.c. |
| Output | UAC,r: *** Va.c. |
| | fAC, r: ** Hz |
| | PAC,r: ** kW |
| | IAC,max: ** Aa.c. |
| | SR: ** kVA |
| | Smax: ** kVA |

P.F.: ~*, **cap...*ind
 T operating: ~*~** °C
 Non-isolated, IP**, protective Class I, OVC DCII/ACIII

Safety symbols and certification marks:

- Warning (exclamation mark in triangle)
- High voltage (lightning bolt in triangle)
- Prohibition of fire (flame with slash)
- CE mark
- RoHS mark (crossed-out trash can)
- UL mark (UL in circle)

S/N:

***** Co., Ltd.
 E-mail: *****@****.com

4 Check and Storage

4.1 Check Before Receiving

Check the following items before receiving the product.

1. Check the outer packing box for damage, such as holes, cracks, deformation, and other signs of equipment damage. Do not unpack the package and contact the supplier as soon as possible if any damage is found.
2. Check the inverter model. If the inverter model is not what you requested, do not unpack the product and contact the supplier.
3. Check the deliverables for correct model, complete contents, and intact appearance. Contact the supplier as soon as possible if any damage is found.

4.2 Deliverables

注意


[1]. Communication module types include: WiFi/LAN, WiFi, 4G, Bluetooth, etc. The actual delivery type depends on the selected inverter communication method.

[2]. USB-RS485 adapter cable is only available for some Brazilian models.


[3]. 6PIN terminal is only available for Germany.

[4]. 2 for Australia and 3 for other regions.

[5]. CT is only available as standard in Australia.

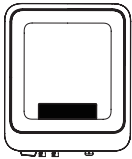

Inverter x 1



Mounting plate x 1



Expansion bolt x 3




OT terminal x 1



Screw x 2




Screw for COM port cover plate x 4




PV connector x 2



2PIN terminal x N^[4]



6PIN terminal x N^[3]




CT x 1^[5]




Documents x 1



USB-RS485 adapter cable x 1^[2]




AC connector x 1



COM module x N^[1]

DNS30INT0001



4.3 Storage

If the equipment is not to be installed or used immediately, please ensure that the storage environment meets the following requirements:


1. Do not unpack the outer package or throw the desiccant away.
2. Store the equipment in a clean place. Make sure the temperature and humidity are appropriate and no condensation.
3. The height and direction of the stacking inverters should follow the instructions on the packing box.
4. The inverters must be stacked with caution to prevent them from falling.
5. If the inverter has been long term stored, it should be checked by professionals before being put into use.
6. If the inverter has been stored for more than two years or has not been in operation for more than six months after installation, it is recommended to be inspected and tested by professionals before being put into use.
7. To ensure good electrical performance of the internal electronic components of the inverter, it is recommended to power it on every 6 months during storage. If it has not been powered on for more than 6 months, it is recommended to to be inspected and tested by professionals before being put into use.


5 Installation

5.1 Installation Requirements

Installation Environment Requirements

1. Do not install the equipment in a place near flammable, explosive, or corrosive materials.
2. Install the equipment on a surface that is solid enough to bear the inverter weight.
3. Install the equipment in a well-ventilated place to ensure good dissipation. Also, the installation space should be large enough for operations.
4. The equipment with a high ingress protection rating can be installed indoors or outdoors. The temperature and humidity at the installation site should be within the appropriate range.
5. Install the equipment in a sheltered place to avoid direct sunlight, rain, and snow. Build a sunshade if it is needed.
6. Do not install the equipment in a place that is easy to touch, especially within children's reach. High temperature exists when the equipment is working. Do not touch the surface to avoid burning.
7. Install the equipment at a height that is convenient for operation and maintenance, electrical connections, and checking indicators and labels.
8. Install the inverter away from high magnetic field to avoid electromagnetic interference. If there is any radio or wireless communication equipment below 30MHz near the inverter, you have to:
 - Install the inverter at least 30m far away from the wireless equipment.
 - Add a low pass EMI filter or a multi winding ferrite core to the DC input cable or AC output cable of the inverter.

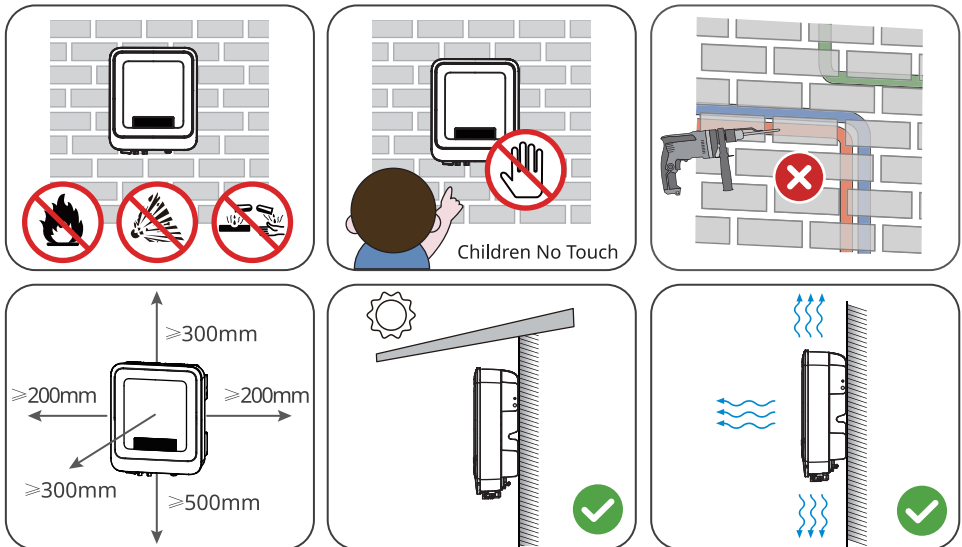

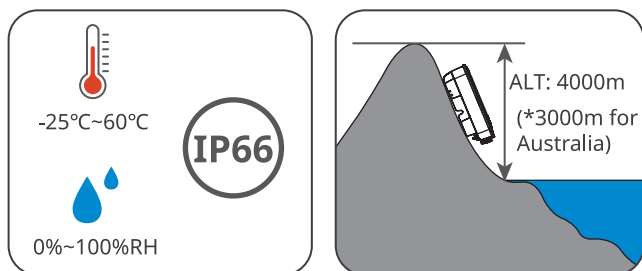


Mounting Support Requirements

- The mounting support shall be nonflammable and fireproof.
- Make sure that the support surface is solid enough to bear the product weight load.
- Do not install the product on the support with poor sound insulation to avoid the noise generated by the working product, which may annoy the residents nearby.

Installation Angle Requirements

- Install the inverter vertically or at a maximum back tilt of 15 degrees.
- Do not install the inverter upside down, forward tilt, back forward tilt, or horizontally.

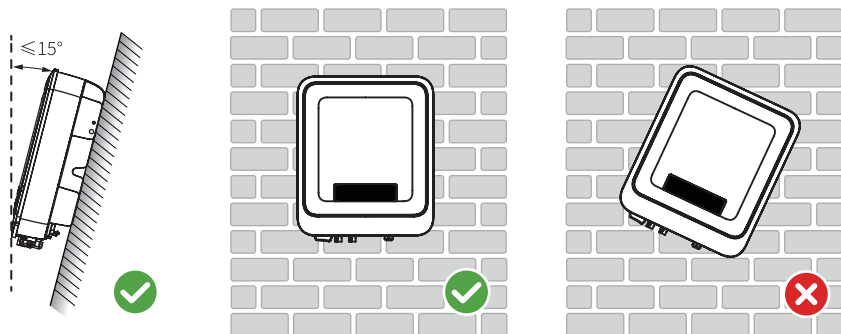

Installation Tool Requirements

The following tools are recommended when installing the equipment. Use other auxiliary tools on site if necessary.

| | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| Goggles | Safety shoes | Safety gloves | Dust mask | DC terminal crimping tool |
|  |  |  |  |  |
| Diagonal pliers | Wire stripper | Hammer drill | Heat gun | DC wiring wrench |
|  |  |  |  |  |
| Marker | Level | Heat shrink tube | Rubber hammer | Vacuum cleaner |
|  |  |  | | |
| Multimeter | Cable tie | Torque wrench | | |

5.2 Inverter Installation

5.2.1 Moving the Inverter

CAUTION

Move the inverter to the site before installation. Follow the instructions below to avoid personal injury or equipment damage.

1. Consider the weight of the equipment before moving it. Assign enough personnel to move the equipment to avoid personal injury.
2. Wear safety gloves to avoid personal injury.
3. Keep balance to avoid falling down when moving the equipment.

5.2.2 Installing the Inverter

NOTICE

- Avoid the water pipes and cables buried in the wall when drilling holes.
- Wear goggles and a dust mask to prevent the dust from being inhaled or contacting eyes when drilling holes.
- The DC switch lock is prepared by the customer.

Step 1 Put the mounting plate on the wall or the support horizontally and mark positions for drilling holes.


Step 2 Drill holes to a depth of 80mm using the hammer drill. The diameter of the drill bit should be 8mm.

Step 3 Secure the mounting plate using the expansion bolts.

Step 4 (Only for Australia.) Install the DC switch lock.

Step 5 Install the inverter on the mounting plate.

Step 6 Install the anti-theft lock.

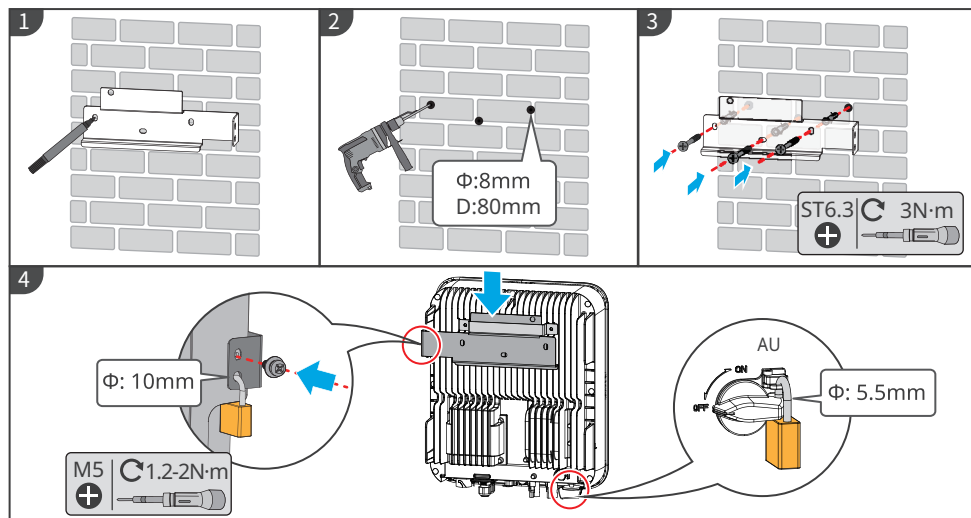

DNS30INT003

6 Electrical Connection

6.1 Safety Precaution

DANGER

- Disconnect the DC switch and the AC output switch of the inverter to power off the inverter before any electrical connections. Do not work with power on. Otherwise, an electric shock may occur.
- Perform electrical connections in compliance with local laws and regulations. Including operations, cables, and component specifications.
- If the cable bears too much tension, the connection may be poor. Reserve a certain length of the cable before connecting it to the inverter cable port.


NOTICE

- Wear personal protective equipment like safety shoes, safety gloves, and insulating gloves during electrical connections.
- All electrical connections should be performed by qualified professionals.
- Cable colors in this document are for reference only. The cable specifications shall meet local laws and regulations.

6.2 Connecting the PE Cable

WARNING

- The PE cable connected to the enclosure of the inverter cannot replace the PE cable connected to the AC output port. Make sure that both of the two PE cables are securely connected.
- Make sure that the grounding point on the enclosure is equipotential connected.
- To improve the corrosion resistance of the terminal, you are recommended to apply silica gel or paint on the ground terminal after installing the PE cable.
- The PE cable is prepared by the customer. Recommended specifications:
 - Type: single-core outdoor copper cable
 - Conductor cross-sectional area: 4-6mm²

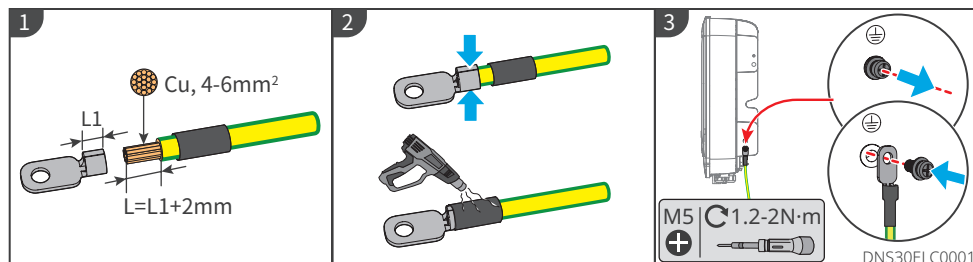

6.3 Connecting the PV Input Cable

DANGER

Confirm the following information before connecting the PV string to the inverter. Otherwise, the inverter may be damaged permanently or even cause fire and cause personal and property losses.

1. Make sure that the max short circuit current and the max input voltage per MPPT are within the permissible range.
2. Make sure that the positive pole of the PV string connects to the PV+ of the inverter. And the negative pole of the PV string connects to the PV- of the inverter.

WARNING

- Mixing PV modules of different brands or models in the same MPPT or connecting PV modules with different directions or inclination angles in the same PV string may not necessarily damage the inverter, but may lead to a decrease in the system performance.
- The maximum open-circuit voltage of each PV string cannot exceed 600V.
- It is recommended that the voltage difference between MPPTs shall be less than 200V.
- It is recommended that the sum of the I_{mp} of the PV strings connected to each MPPT shall not exceed the Max. Input Current per MPPT of the inverter.
- When there are multiple PV strings, it is recommended to maximize the connections of MPPTs.

WARNING

- Connect the DC cables using the delivered PV connectors. The manufacturer shall not be liable for the damage if other connectors are used.
- The PV strings cannot be grounded. Ensure the minimum isolation resistance of the PV string to the ground meets the minimum isolation resistance requirements before connecting the PV string to the inverter.
- The DC input cable is prepared by the customer. Recommended specifications:
 - Type: the outdoor photovoltaic cable that meets the maximum input voltage of the inverter.
 - Conductor cross-sectional area: 4~6mm² (MC4).

NOTICE

Seal the PV input terminals using waterproof covers when they are not to be used. Otherwise, the ingress protection rating will be influenced.

Connecting the DC Input Cable

Step 1 Prepare DC cables.


Step 2 Crimp the crimp contacts.

Step 3 Disassemble the PV connectors.


Step 4 Make the DC cable and detect the DC input voltage.

Step 5 Plug the PV connectors into the PV terminals.


PV Connector-1

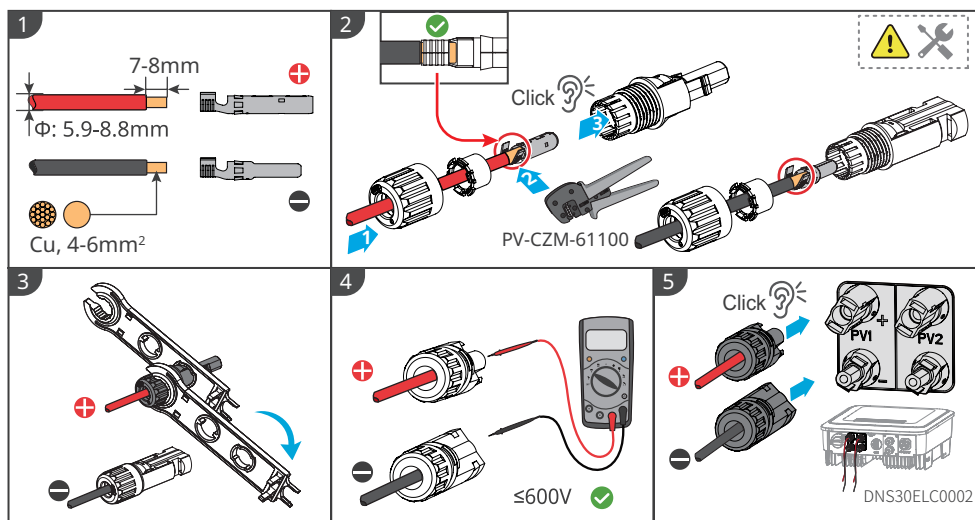

PV Connector-2

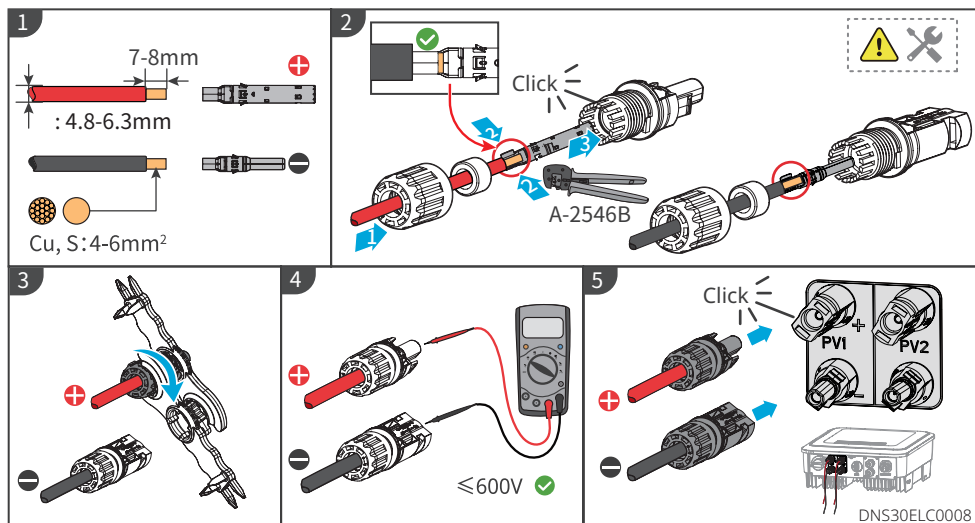

PV Connector-3

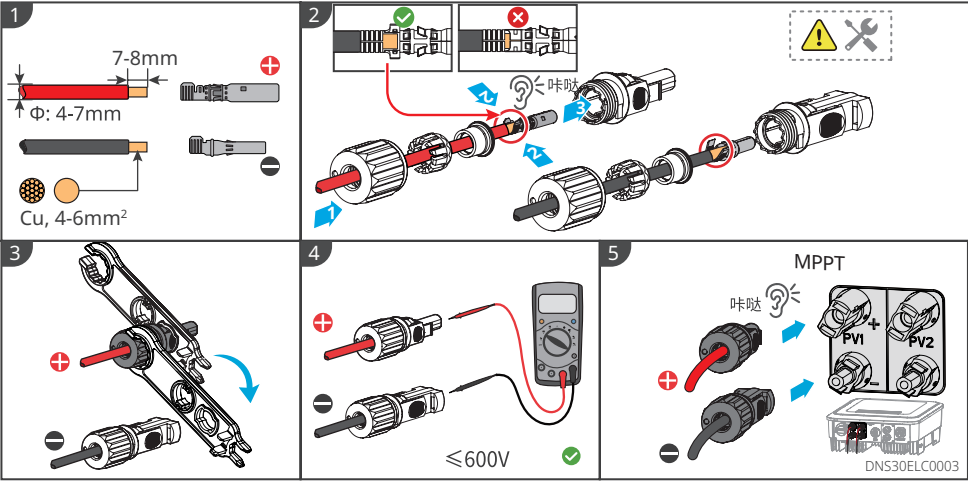

6.4 Connecting the AC Output Cable

⚠ WARNING

- Do not connect loads between the inverter and the AC switch directly connected to the inverter.
- The Residual Current Monitoring Unit (RCMU) is integrated into the inverter. The inverter will disconnect the utility grid rapidly once it detects any leak current over the permissible range.

An AC circuit breaker shall be installed on the AC side to make sure that the inverter can safely disconnect the grid when an exception happens. Select the appropriate AC circuit breaker in compliance with local laws and regulations. Recommended AC circuit breakers:

| Inverter model | AC circuit breaker |
|-----------------|--------------------|
| GW3000-DNS-30 | 25A |
| GW3600-DNS-30 | 25A |
| GW4200-DNS-30 | 32A |
| GW5000-DNS-30 | 32A |
| GW6000-DNS-30 | 40A |
| GW5000-DNS-B30 | 32A |
| GW6000-DNS-B30 | 40A |
| GW5000-DNS-EU30 | 32A |

Please choose whether to install an RCD device in accordance with local laws and regulations. When the DC component of the leakage current exceeds permissible limits, an A-type Residual Current Device (RCD) must be installed to protect the equipment. It is recommended to select an RCD rated at 300mA (according to local regulations)

NOTICE

Install one AC circuit breaker for each inverter.

⚠ WARNING


- Pay attention to the silkscreens L, N, PE on the AC terminal. Connect the AC cables to the corresponding terminals. The inverter may be damaged if the cables are connected inappropriately.
- Make sure that the whole cable cores are inserted into the AC terminal holes. No part of the cable core can be exposed.
- Make sure that the cables are connected securely. Otherwise, the terminal may be too hot to damage the inverter when the inverter is working.

Step 1 Make the AC output cable.


Step 2 Disassemble the AC connector.

Step 3 Insert the AC output cable into the AC connector.

Step 4 Plug the AC connector into the inverter.

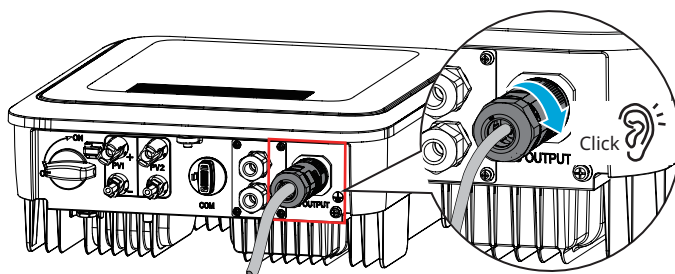


AC Connector-1




or


AC Connector-2




AC Connector-1

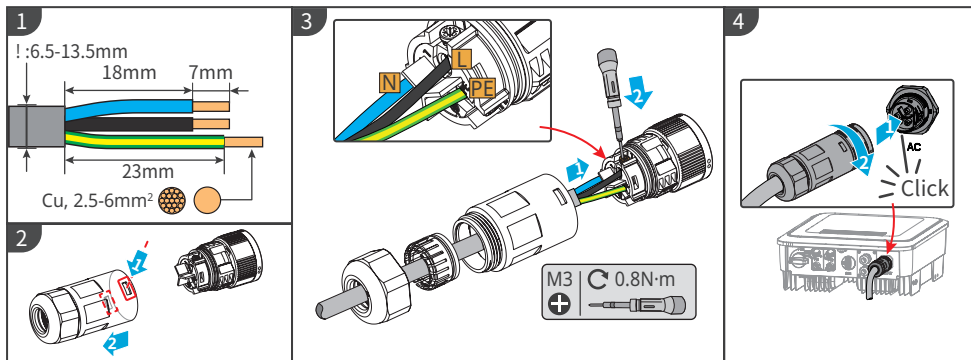

Disconnect AC terminal

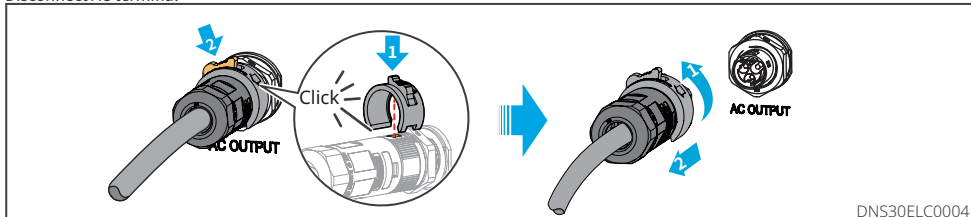

AC Connector-2

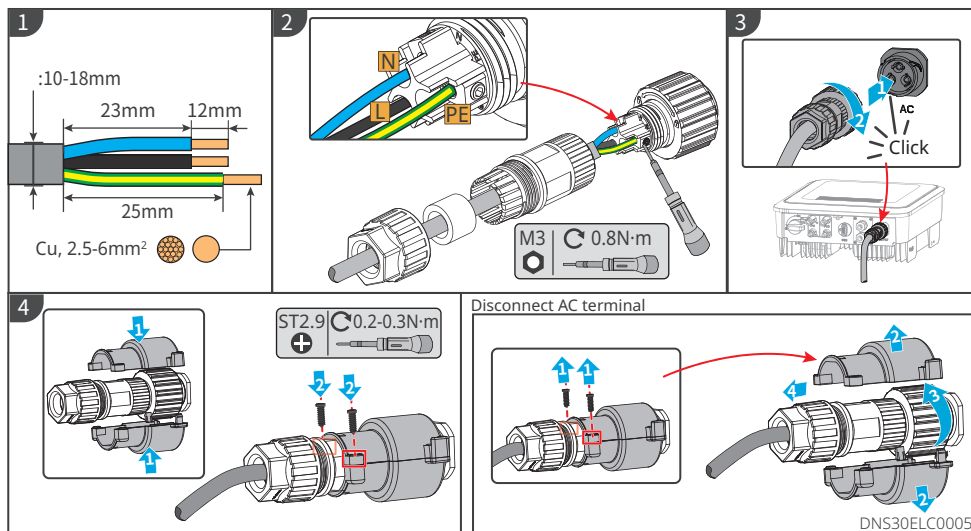

NOTICE

- Make sure that the cable is connected correctly and securely. Clear the debris after completing the connection.
- Seal the AC output terminal to ensure the ingress protection rating.

6.5 Communication

NOTICE


The specific function configuration of the product, please refer to the actual model of the inverter in the actual region.

6.5.1 Communication Network Introduction

Power Limit Network

The PV station generates power for self-consumption, but the electric equipment cannot consume all the generated power. The inverter can monitor the on-grid electric data in real-time and adjust the output power via a smart meter to avoid the residual current feeding back to the utility grid.

GM1000

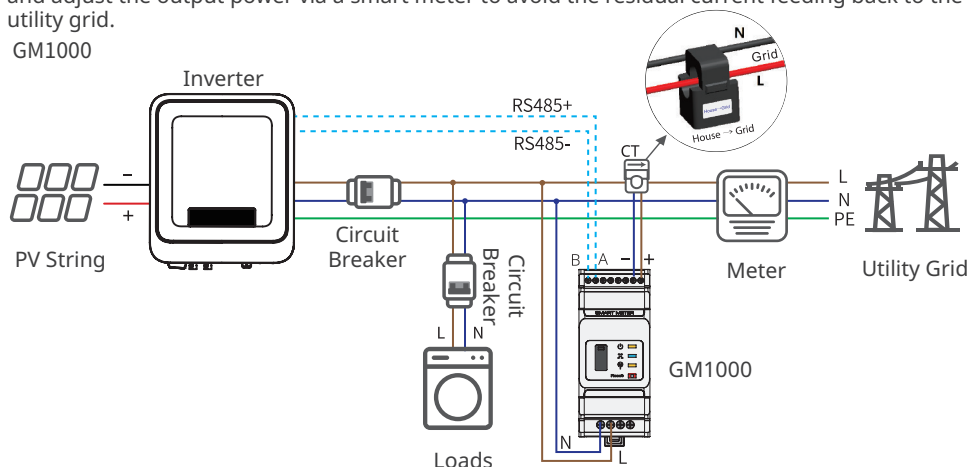


Notice

After completing cable connections, set related parameters via LCD or SolarGo app to enable export power limit control or output power limit control.

Load Monitoring Network


With the HomeKit device and two CTs, the inverter output data and on-grid data can be accurately measured to calculate the load electricity consumption. The operating data will be uploaded to the cloud via WiFi or LAN to realize 24 hours real-time load electricity consumption monitoring.

HK1000

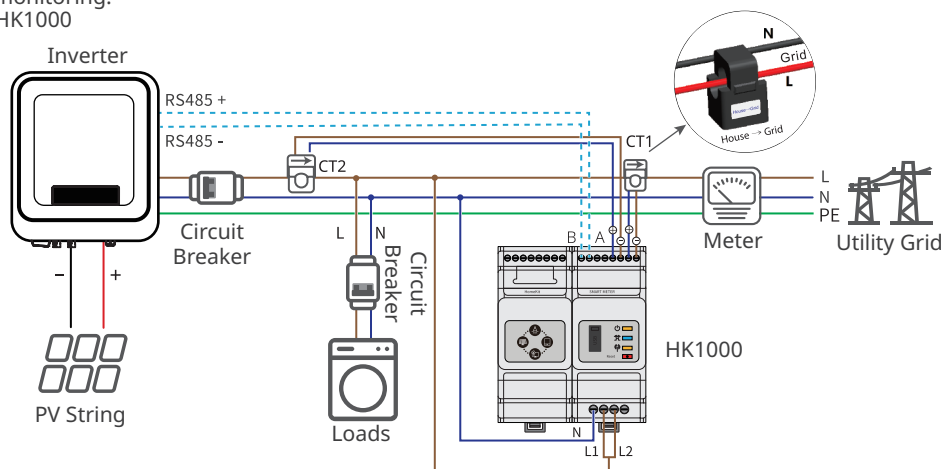

6.5.2 Connecting the Communication Cable

Cable: Outdoor shielded twisted pair. The cable should meet local requirements.

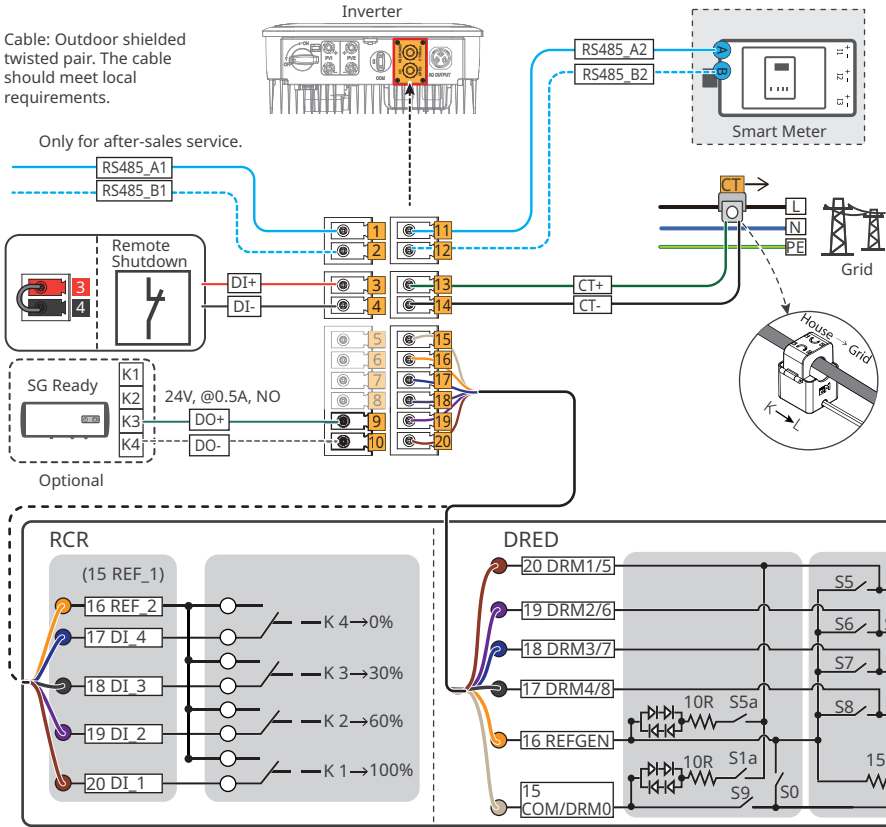


DNS30NET0001

| No | Terminal | Function |
|-----|---|---|
| 1-2 | RS485 | It supports connecting to the upper computer for commissioning. Please contact the after-sales service for detail information. |
| | Remote Shutdown or Emergency Power Off (For India only) | <p>The AC side of the inverter is automatically disconnected after the emergency switch gives a shutdown signal, stopping grid connection. An external emergency shutdown switch is required and controlled through the DI port:</p> <ul style="list-style-type: none"> Remote Shutdown: if the DI port is connected, the machine will be started; if the DI port is disconnected, the machine will be stopped. Emergency Shutdown: if DI port is connected, it will stop the machine; if DI port is disconnected, it will start the machine. |

| No | Terminal | Function |
|-------|--------------|---|
| 5-8 | Dry contact | Reserved. |
| 9-10 | Load control | <p>optional.</p> <ul style="list-style-type: none"> • Supports connecting to dry contact signals to realize functions such as load control. Switching capacity of DO is 24V DC@0.5A. NO/COM is the normally open contact. • Supports SG Ready heat pump, which can be controlled by the dry contact signal. |
| 11-12 | Meter | Realize the dynamic export limit function by connecting the meter and the CT. Contact the manufacturer to purchase the devices if you need them. |
| 13-14 | CT | |
| 15-20 | DRED | The port is reserved in compliance to grid regulations in Australia and New Zealand. Related devices should be prepared by customers. |

Notice


- Make sure that the communication device is connected to the right terminal. Route the communication cable far away from any interference source or power cable to prevent the signal from being influenced.
- Connect the RS485 cable, remote shutdown cable, meter cable, and CT cable using a 2PIN communication terminal.
- Connect the dry contact cable and DRED cable using a 6PIN communication terminal.
- Remove the short circuit wire and keep it properly when enabling the DRED function.
- Enable the DRED, RCR or remote shutdown function via SolarGo App after cable connections.
- If the inverter is not connected to the DRED device or remote shutdown device, do not enable these functions in the SolarGo App, otherwise the inverter cannot be connected to the grid for operation.

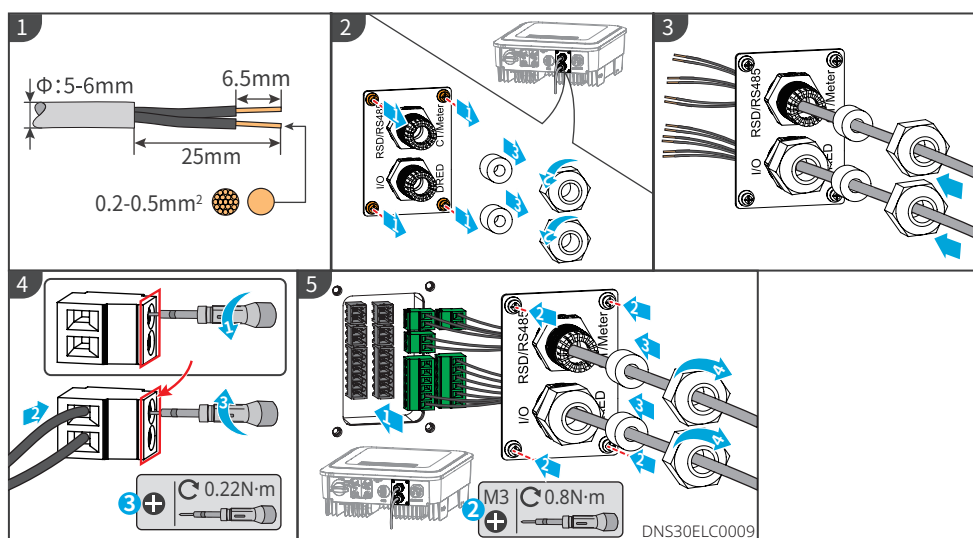

6.5.3 Installing the Communication Module

Plug a communication module into the inverter to establish a connection between the inverter and the smartphone or web pages. The communication module can be a Bluetooth module, WiFi module, LAN module or 4G module. Set inverter parameters, check running information and fault information, and observe system status in time via the smartphone or web pages.

WiFi kit, WiFi kit-20, 4G kit , Bluetooth Kit, WiFi/LAN Kit , WiFi/LAN Kit-20 module: optional.

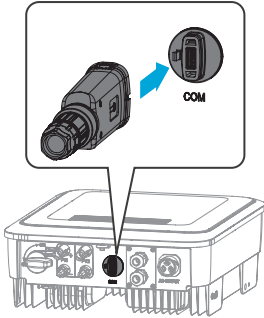


Notice

Refer to the delivered communication module user manual to get more introduction to the module. For more detailed information, visit <https://en.goodwe.com>.

6.5.4 Connect USB-RS485 adapter cable

USB-RS485 adapter cable: For Brazilian models only.

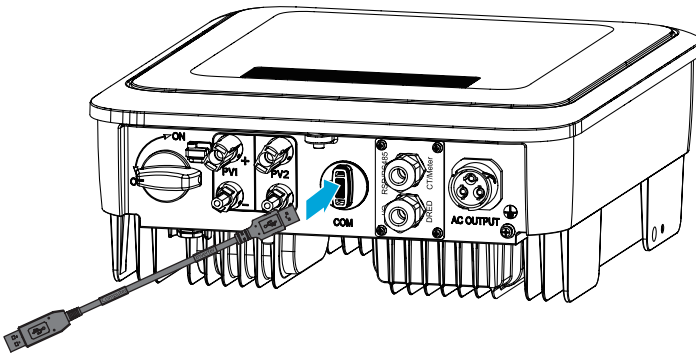

7 Equipment Commissioning


7.1 Check Before Power ON

| No. | Check Item |
|-----|---|
| 1 | The product is firmly installed at a clean place that is well-ventilated and easy to operate. |
| 2 | The PE, DC input, AC output, and communication cables are connected correctly and securely. |
| 3 | Cable ties are intact, routed properly and evenly. |
| 4 | Unused ports and terminals are sealed. |
| 5 | The voltage and frequency at the connection point meet the inverter grid connection requirements. |

7.2 Power On

Step 1 Turn on the AC switch between the inverter and the utility grid.



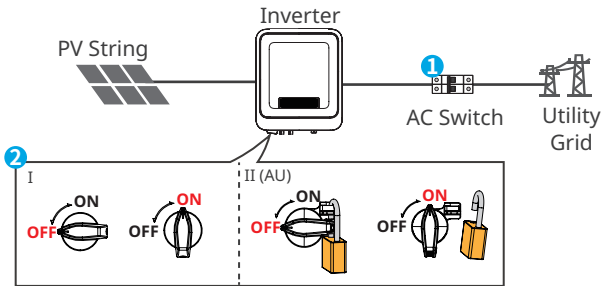










Step 2 Turn on the DC switch of the inverter.





















8 System Commissioning

8.1 Indicators and Buttons

With LCD

| Indicator | Status | Description |
|--|---|---|
|  Power |  | ON = Wi-Fi IS CONNECTED/ACTIVE |
| |  | BLINK 1 = Wi-Fi SYSTEM IS RESETTNG |
| |  | BLINK 2 = NOT CONNECTED TO THE ROUTER |
| |  | BLINK 4 = Wi-Fi SERVER PROBLEM |
| |  | BLINK = RS485 IS CONNECTED |
| |  | OFF = Wi-Fi IS NOT ACTIVE |
|  Operating |  | ON = THE INVERTER IS FEEDING POWER |
| |  | OFF = THE INVERTER IS NOT FEEDING POWER AT THE MOMENT |
|  Faulty |  | ON = A FAULT HAS OCCURRED |
| |  | OFF = NO FAULT |

Without LCD

| Indicators | Status | Description |
|--|---|---|
|  Power |  | ON= EQUIPMENT POWER ON |
| |  | OFF= EQUIPMENT POWER OFF |
|  Operating |  | ON= THE INVERTER IS FEEDING POWER |
| |  | OFF= THE INVERTER IS NOT FEEDING POWER |
| |  | SINGLE SLOW FLASH= SELF CHECK BEFORE CONNECTING TO THE GRID |
| |  | SINGLE FLASH = CONNECTING TO THE GRID |
|  SEMS |  | ON= WIRELESS IS CONNECTED/ACTIVE |
| |  | BLINK 1 = WIRELESS SYSTEM IS RESETTNG |
| |  | BLINK 2 = WIRELESS ROUTER PROBLEM |
| |  | BLINK 4 = WIRELESS SERVER PROBLEM |
| |  | BLINK = RS485 IS CONNECTED |
| |  | OFF= WIRELESS IS NOT ACTIVE |
|  Faulty |  | ON= A FAULT HAS OCCURRED |
| |  | OFF= NO FAULT |

8.2 Setting Inverter Parameters via LCD


NOTICE

- Inverter firmware version shown in this document is V1.00.00. Communication version: V1.00. The screenshots are for reference only. The actual interface may differ.
- The name, range, and default value of the parameters are subject to change or adjustment. The actual display prevails.
- To prevent the generating capacity from being influenced by wrong parameters, the power parameters should be set by professionals.

LCD Button Description


- Stop pressing the button for a period on any page, the LCD will get dark and go back to the initial page.
- Short press the button to switch menu or adjust parameter values.
- Long press the button to enter the submenu. After adjusting the parameter values, long press to set it.

Examples:

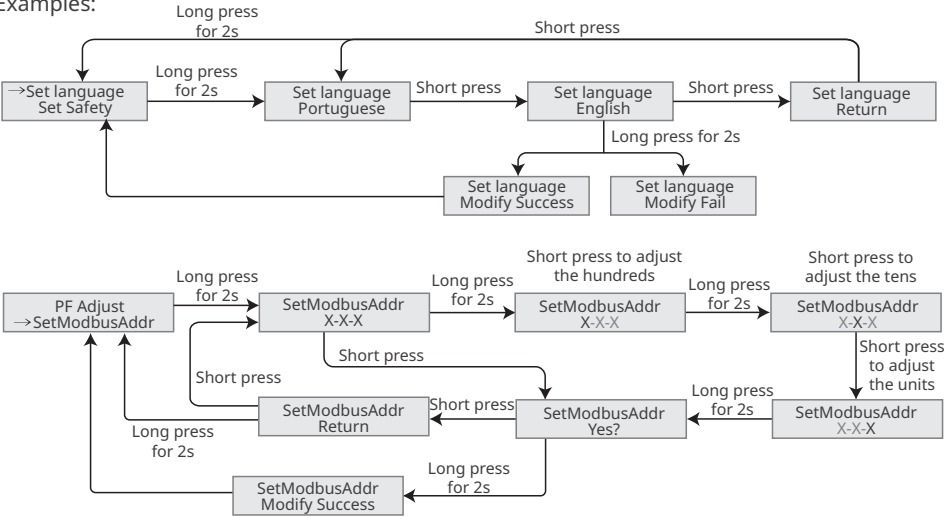


For Australia:

User need type the password to enter the sub-menu for parameter setting.

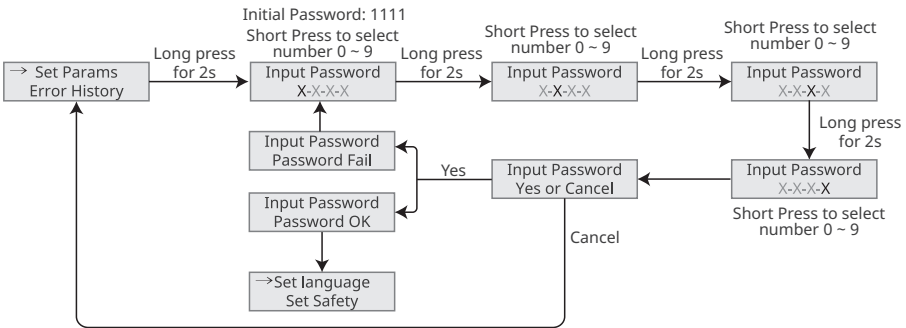

8.2.1 LCD Menu Introduction

This part describes the menu structure, allowing you to view inverter information and set parameters more conveniently.

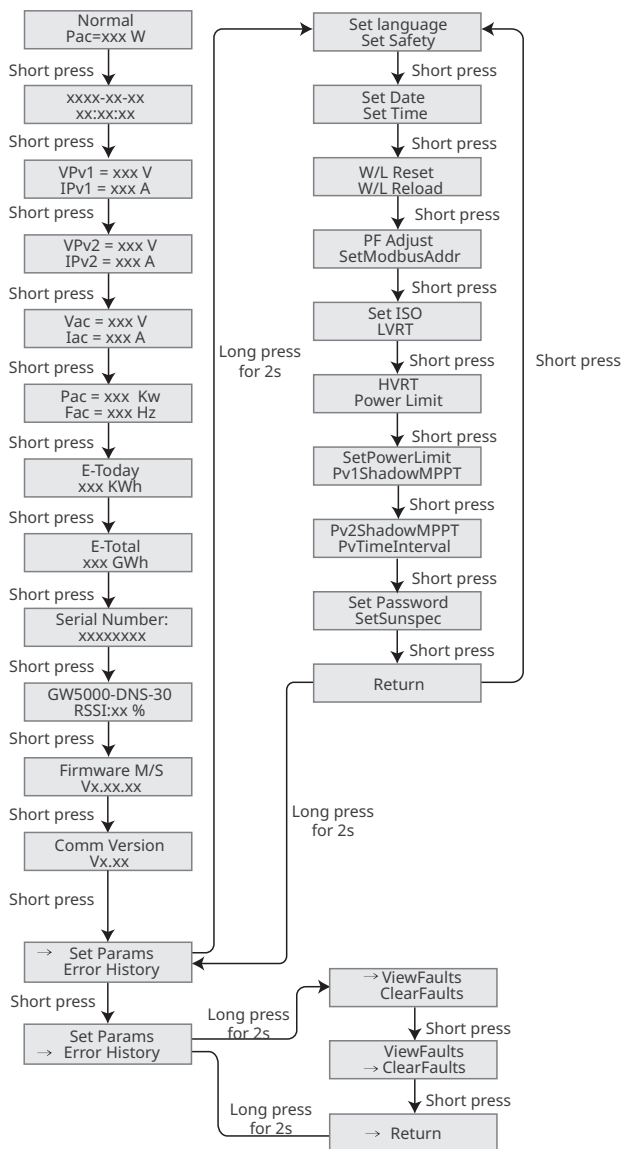

8.2.2 Inverter Parameter Introduction

| Parameters | Description |
|------------------------|--|
| Normal | Home page. Indicates the real-time power of the inverter. |
| 2022-02-14 09:01:10 | Check the time of the country/region. |
| VPv1 | Check the DC input voltage of the inverter. |
| IPv1 | Check the DC input current of the inverter. |
| Vac | Check the voltage of the utility grid. |
| Iac | Check the AC output current of the inverter. |
| Fac | Check the frequency of the utility grid. |
| E-Today | Check the generated power of the system for that day. |
| E-Total | Check the total generated power of the system. |
| Serial Number | Check the serial number of the inverter. |
| GW5000-DNS-30 RSSI | Check the signal strength of the communication module. |
| Firmware M/S | Check the firmware version. |
| Comm Version | Check the ARM software version. |
| Set Safety | Set the safety country/region in compliance with the local grid standards and application scenario of the inverter. |
| Set Date | Set time according to the actual time in the country/region where the inverter is located. |
| Set Time | |
| Set Password | The password can be changed. Keep the changed password in mind after changing it. Contact the after-sales service if you forget the password. |
| W/L Reset | Power off and restart the communication module. |
| W/L Reload | Restore the factory settings of the communication module. Reconfigure the communication module network parameters after restoring the factory settings, |
| PF Adjust | Set the power factor of the inverter according to the actual situation. |
| SetModbusAddr | Set the actual Modbus address. |
| Set ISO | Indicates the PV-PE insulation resistance threshold value. When the detected value is under the set value, the IOS fault occurs. |

| Parameters | Description |
|----------------|---|
| LVRT | With LVRT on, the inverter will stay connected with the utility grid after a short-term utility grid low voltage exception occurs. |
| HVRT | With HVRT on, the inverter will stay connected with the utility grid after a short-term utility grid high voltage exception occurs. |
| Power Limit | Set the power feed back into the utility grid according to the actual situation. |
| SetPowerLimit | |
| Pv1ShadowMPPT | Enable the shadow scan function if the PV panels are shadowed. |
| PV2ShadowMPPT | |
| PvTimeInterval | Set the scan time according to the actual needs. |
| SetSunspec | Set the Sunspeg based on the actual communication method. |
| ViewFaults | Check historical error message records of the inverter. |
| ClearFaults | Clear historical error message records of the inverter. |

8.3 Upgrading the Firmware Via USB Flash Disk

Step 1 Contact the after-sales service to obtain the upgrade package.

Step 2 Save the upgrade package in the USB flash drive.

Step 3 Insert the USB flash drive into the USB port, and upgrade the software version of the inverter following the prompts.

8.4 Setting Inverter Parameters via SolarGo App

SolarGo app is a mobile application that communicates with the inverter via Bluetooth module or WIFI module. Commonly used functions are as follows:

1. Check the operating data, software version, alarms, etc.
2. Set grid parameters, communication parameters, etc.
3. Equipment maintenance.

For more details, refer to the SolarGo APP User Manual. Scan the QR code or visit https://en.goodwe.com/Ftp/EN/Downloads/User%20Manual/GW_SolarGo_User%20Manual-EN.pdf to get the user manual.



SolarGo App



SolarGo App User Manual

9 Maintenance

9.1 Power Off the Inverter

DANGER

- Power off the inverter before operations and maintenance. Otherwise, the inverter may be damaged or electric shocks may occur.
- Delayed discharge. Wait until the components are discharged after power off.

Step 1 (optional) Send shutdown command to the inverter.

Step 2 Turn off the AC switch between the inverter and the utility grid.

Step 3 Turn off the DC switch of the inverter.

9.2 Removing the Inverter

WARNING

- Make sure that the inverter is powered off.
- Wear proper PPE before any operations.

Step 1 Disconnect all the cables, including DC cables, AC cables, communication cables, the communication module, and PE cables.

Step 2 Grab the handles or hoist the inverter to remove the inverter from the mounting plate.

Step 3 Remove the mounting plate.

Step 4 Store the inverter properly. If the inverter needs to be used later, ensure that the storage conditions meet the requirements.

9.3 Disposing of the Inverter

If the inverter cannot work anymore, dispose of it according to the local disposal requirements for electrical equipment waste. The inverter cannot be disposed of together with household waste.

9.4 Troubleshooting

Perform troubleshooting according to the following methods. Contact the after-sales service if these methods do not work.

Collect the information below before contacting the after-sales service, so that the problems can be solved quickly.

1. Inverter information like serial number, software version, installation date, fault time, fault frequency, etc.
2. Installation environment, including weather conditions, whether the PV modules are sheltered or shadowed, etc. It is recommended to provide some photos and videos to assist in analyzing the problem.
3. Utility grid situation.

| No. | Fault | Cause | Solutions |
|-----|------------------------|--|--|
| 1 | Utility Loss | 1. Utility grid power fails. 2. The AC cable is disconnected, or the AC breaker is off. | 1. The alarm is automatically cleared after the grid power supply is restored. 2. Check whether the AC cable is connected and the AC breaker is on. |
| 2 | Grid Overvoltage | The grid voltage exceeds the permissible range, or the duration of high voltage exceeds the requirement of HVRT. | 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid voltage is within the permissible range. <ul style="list-style-type: none"> • Contact the local power company if the grid voltage exceeds the permissible range. • Modify the overvoltage protection threshold, HVRT or disable the overvoltage protection function after obtaining the consent of the local power company if the grid frequency is within the permissible range. 3. Check whether the AC breaker and the output cables are connected securely and correctly if the problem persists. |
| 3 | Grid Rapid Overvoltage | The grid voltage is abnormal or ultra-high. | 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid voltage is within the allowed range. <ul style="list-style-type: none"> • Contact the local power company if the grid voltage exceeds the permissible range. • Modify the grid overvoltage rapid protection threshold after obtaining the consent of the local power company if the grid voltage is within the permissible range. |

| No. | Fault | Cause | Solutions |
|-----|------------------------|---|--|
| 4 | Grid Undervoltage | The grid voltage is lower than the permissible range, or the duration of low voltage exceeds the requirement of LVRT. | <ol style="list-style-type: none"> 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid voltage is within the permissible range. <ul style="list-style-type: none"> • Contact the local power company if the grid voltage exceeds the permissible range. • Modify the undervoltage protection threshold, LVRT or disable the undervoltage protection function after obtaining the consent of the local power company if the grid frequency is within the permissible range. 3. Check whether the AC breaker and the output cables are connected securely and correctly if the problem persists. |
| 5 | Grid 10min Overvoltage | The moving average of grid voltage in 10min exceeds the range of safety requirements. | <ol style="list-style-type: none"> 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid voltage is within the permissible range. <ul style="list-style-type: none"> • Contact the local power company if the grid voltage exceeds the permissible range. • Modify the 10min overvoltage protection threshold with the consent of the local power company if the grid voltage is within the permissible range. |
| 6 | Grid Overfrequency | Utility grid exception. The actual grid frequency exceeds the requirement of the local grid standard. | <ol style="list-style-type: none"> 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid frequency is within the permissible range. <ul style="list-style-type: none"> • Contact the local power company if the grid frequency exceeds the permissible range. • Modify the overfrequency protection threshold or disable the overfrequency protection function after obtaining the consent of the local power company if the grid frequency is within the permissible range. |

| No. | Fault | Cause | Solutions |
|-----|----------------------------|--|---|
| 7 | Grid Underfrequency | Utility grid exception. The actual grid frequency is lower than the requirement of the local grid standard. | <ol style="list-style-type: none"> 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid frequency is within the permissible range. <ul style="list-style-type: none"> • Contact the local power company if the grid frequency exceeds the permissible range. • Modify the underfrequency protection threshold or disable the underfrequency protection function after obtaining the consent of the local power company if the grid frequency is within the permissible range. |
| 8 | Grid Frequency Instability | Utility grid exception. The actual grid frequency change rate does not meet the requirement of the local grid standard. | <ol style="list-style-type: none"> 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid frequency is within the permissible range. <ul style="list-style-type: none"> • Contact the local power company if the grid frequency exceeds the permissible range. • Contact the dealer or the after-sales service if the grid frequency is within the permissible range. |
| 9 | Anti-islanding | The utility grid is disconnected. The utility grid is disconnected according to the safety regulations, but the grid voltage is maintained due to the loads. | <ol style="list-style-type: none"> 1. Check whether the utility grid is disconnected. 2. Contact the dealer or the after-sales service. |
| 10 | LVRT Undervoltage | Utility grid exception. The duration of the utility grid exception exceeds the set time of LVRT. | <ol style="list-style-type: none"> 1. If the problem occurs occasionally, the utility grid may be abnormal temporarily. The inverter will recover automatically after detecting that the utility grid is normal. 2. If the problem occurs frequently, check whether the grid frequency is within the permissible range. If not, contact the local power company. If yes, contact the dealer or the after-sales service. |
| 11 | HVRT Overvoltage | Utility grid exception. The duration of utility grid exception exceeds the set time of HVRT. | |

| No. | Fault | Cause | Solutions |
|-----|---|--|--|
| 12 | Abnormal GFCI 30mA | The input insulation impedance becomes low when the inverter is working. | <ol style="list-style-type: none"> 1. If the problem occurs occasionally, it may be caused by a cable exception. The inverter will recover automatically after the problem is solved. 2. Check whether the impedance between the PV string and PE is too low if the problem occurs frequently or persists. |
| 13 | Abnormal GFCI 60mA | | |
| 14 | Abnormal GFCI 150mA | | |
| 15 | Abnormal GFCI | | |
| 16 | Large DC of AC current L1 | The DC component of the output current exceeds the safety range or default range. | <ol style="list-style-type: none"> 1. If the problem is caused by an external fault like a utility grid exception or frequency exception, the inverter will recover automatically after solving the problem. 2. If the problem occurs frequently and the PV station cannot work properly, contact the dealer or the after-sales service. |
| 17 | Large DC of AC current L2 | | |
| 18 | Low Insulation Res. (Earth fault alarm) | <ol style="list-style-type: none"> 1. The PV string is short-circuited to PE. 2. The PV system is in a moist environment and the cable is not well insulated to the ground. | <ol style="list-style-type: none"> 1. Check whether the resistance of the PV string to PE exceeds 50kΩ. If no, check the short circuit point. 2. Check whether the PE cable is connected correctly. 3. If the resistance is lower on rainy days, please reset the ISO. <p>Inverters for the Australian and New Zealand markets can also be alerted in the following ways in the event of insulation impedance failure:</p> <ol style="list-style-type: none"> 1. The inverter is equipped with the buzzer: the buzzer sounds continuously for 1 minute in case of failure; If the fault is not resolved, the buzzer sounds every 30 minutes. 2. Add the inverter to the monitoring platform, and set the alarm reminder, the alarm information can be sent to the customer by emails. |
| 19 | Abnormal Ground | <ol style="list-style-type: none"> 1. The PE cable of the inverter is not connected well. 2. The L cable and N cable are connected reversely when output of the PV string is grounded. | <ol style="list-style-type: none"> 1. Check whether the PE cable of the inverter is connected properly. 2. Check whether the L cable and N cable are connected reversely if output of the PV string is grounded. |

| No. | Fault | Cause | Solutions |
|-----|----------------------------|--|---|
| 20 | Anti Reverse power Failure | Abnormal fluctuation of load | <ol style="list-style-type: none"> 1. If the exception is caused by an external fault, the inverter will recover automatically after solving the problem. 2. If the problem occurs frequently and the PV station cannot work properly, contact the dealer or the after-sales service. |
| 21 | Internal Comm Loss | <ol style="list-style-type: none"> 1. Frame format error 2. Parity checking error 3. Can bus offline 4. Hardware CRC error 5. Send (receive) control bit is receive (send). 6. Transmit to the unit that is not allowed. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 22 | AC HCT Check abnormal | The sampling of the AC HCT is abnormal. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 23 | GFCI HCT Check abnormal | The sampling of the GFCI HCT is abnormal. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 24 | Relay Check abnormal | <ol style="list-style-type: none"> 1. The relay is abnormal or short-circuited. 2. The control circuit is abnormal. 3. The AC cable connection is abnormal, like a virtual connection or short circuit. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 25 | Internal Fan abnormal | <ol style="list-style-type: none"> 1. The fan power supply is abnormal. 2. Mechanical exception. 3. The fan is aging and damaged. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 26 | Flash Fault | The internal Flash storage is abnormal. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |

| No. | Fault | Cause | Solutions |
|-----|------------------------------------|--|--|
| 27 | DC Arc Fault | <ol style="list-style-type: none"> 1. The DC terminal is not firmly connected. 2. The DC cable is broken. | Read the Quick Installation Guide and check whether the cables are connected properly. |
| 28 | AFCI Self-test Fault | AFCI detection is abnormal. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 29 | Cavity Overtemperature | <ol style="list-style-type: none"> 1. The inverter is installed in a place with poor ventilation. 2. The ambient temperature exceeds 60°C. 3. A fault occurs in the internal fan of the inverter. | <ol style="list-style-type: none"> 1. Check the ventilation and the ambient temperature at the installation point. 2. If the ventilation is poor or the ambient temperature is too high, improve the ventilation and heat dissipation. 3. Contact the dealer or after-sales service if both the ventilation and the ambient temperature are normal. |
| 30 | BUS Overvoltage | <ol style="list-style-type: none"> 1. The PV voltage is too high. 2. The sampling of the inverter BUS voltage is abnormal. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 31 | PV Input Overvoltage | The PV array configuration is not correct. Too many PV panels are connected in series in the PV string. | Check the serial connection of the PV array. Make sure that the open circuit voltage of the PV string is not higher than the maximum operating voltage of the inverter. |
| 32 | PV Continuous Hardware Overcurrent | <ol style="list-style-type: none"> 1. The PV configuration is not proper. 2. The hardware is damaged. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 33 | PV Continuous Software Overcurrent | <ol style="list-style-type: none"> 1. The PV configuration is not proper. 2. The hardware is damaged. | Disconnect the AC output switch and DC input switch, then connect them 5 minutes later. Contact the dealer or the after-sales service if the problem persists. |
| 34 | String1 PV String Reversed | The PV string is connected reversely. | Check whether the PV1 and PV2 strings are connected reversely. |
| 35 | String2 PV String Reversed | | |

9.5 Routine Maintenance

| Maintaining Item | Maintaining Method | Maintaining Period |
|-----------------------|---|--------------------|
| System Clean | Check the heat sink, air intake, and air outlet for foreign matter or dust. | Once 6-12 months |
| DC Switch | Turn the DC switch on and off ten consecutive times to make sure that it is working properly. | Once a year |
| Electrical Connection | Check whether the cables are securely connected. Check whether the cables are broken or whether there is any exposed copper core. | Once 6-12 months |
| Sealing | Check whether all the terminals and ports are properly sealed. Reseal the cable hole if it is not sealed or too big. | Once a year |

10 Technical Parameters

| Technical Parameters | GW3000-DNS-30 | GW3600-DNS-30 | GW4200-DNS-30 | GW5000-DNS-30 |
|---|---------------|---------------|---------------|---------------|
| Input | | | | |
| Max. Input Power (W)*6 | 4,500 | 5,400 | 6,300 | 7,500 |
| Max. Input Voltage (V) | 600 | 600 | 600 | 600 |
| MPPT Operating Voltage Range (V) | 40~560 | 40~560 | 40~560 | 40~560 |
| MPPT Voltage Range at Nominal Power (V) | 100~500 | 120~500 | 140~500 | 140~600 |
| Start-up Voltage (V) | 50 | 50 | 50 | 50 |
| Nominal Input Voltage (V) | 360 | 360 | 360 | 360 |
| Max. Input Current per MPPT (A) | 16 | 16 | 16 | 16 |
| Max. Short Circuit Current per MPPT (A) | 23 | 23 | 23 | 23 |
| Max.Backfeed Current to The Array (A) | 0 | 0 | 0 | 0 |
| Number of MPP trackers | 2 | 2 | 2 | 2 |
| Number of Strings per MPPT | 1 | 1 | 1 | 1 |
| Output | | | | |
| Nominal Output Power (W) | 3,000 | 3,600 | 4200*1 | 5,000 |
| Nominal Output Apparent Power (VA) | 3,000 | 3,600 | 4200*1 | 5,000 |
| Max. AC Active Power (W)*2 | 3,300 | 3960*5*8 | 4620*1*5 | 5,500 |
| Max. AC Apparent Power (VA)*2 | 3,300 | 3960*5*8 | 4620*1*5 | 5,500 |
| Nominal Power at 40°C(W)(Only for Brazil) | 3,000 | 3,600 | 4,200 | 5,000 |
| Max Power at 40°C (Including AC Overload)(W)(Only for Brazil) | 3,000 | 3,600 | 4,200 | 5,000 |

| Technical Parameters | GW3000-DNS-30 | GW3600-DNS-30 | GW4200-DNS-30 | GW5000-DNS-30 |
|--|---|----------------------|--------------------|---------------|
| Nominal Output Voltage (V) | 220/230/240 | 220/230/240 | 220/230/240 | 220/230/240 |
| Output Voltage Range (V) | 196~311 (According to local standard) | | | |
| Nominal AC Grid Frequency (Hz) | 50/60 | 50/60 | 50/60 | 50/60 |
| AC Grid Frequency Range (Hz) | 45~55 / 55~65 | 45~55 / 55~65 | 45~55 / 55~65 | 45~55 / 55~65 |
| Max. Output Current (A) | 14.4 | 17.3 ^{*5*7} | 20.1 ^{*5} | 24.0 |
| Max. Output Fault Current (Peak and Duration) (A) (at 4ms) | 33.4 | 33.4 | 44.5 | 44.5 |
| Inrush Current (Peak and Duration) (A) (at 10μs) | 39 | 39 | 39 | 39 |
| Nominal Output Current (A) ^{*2} | 13.7 | 16.4 ^{*7} | 19.1 | 22.8 |
| Power Factor | ~1 (Adjustable from 0.8 leading to 0.8 lagging) | | | |
| Max. Total Harmonic Distortion | <3% | | | |
| Maximum Output Overcurrent Protection (A) | 31 | 31 | 42 | 42 |
| Efficiency | | | | |
| Max. Efficiency | 97.9% | 97.9% | 97.9% | 97.9% |
| European Efficiency | 97.0% | 97.0% | 97.2% | 97.3% |
| CEC Efficiency | 97.2% | 97.2% | 97.3% | 97.3% |
| Protection | | | | |
| PV String Current Monitoring | Integrated | | | |
| PV Insulation Resistance Detection | Integrated | | | |
| Residual Current Monitoring | Integrated | | | |
| PV Reverse Polarity Protection | Integrated | | | |
| Anti-islanding Protection | Integrated | | | |

| Technical Parameters | GW3000-DNS-30 | GW3600-DNS-30 | GW4200-DNS-30 | GW5000-DNS-30 |
|----------------------------------|--------------------------------|---------------|---------------|---------------|
| AC Overcurrent Protection | Integrated | | | |
| AC Short Circuit Protection | Integrated | | | |
| AC Overvoltage Protection | Integrated | | | |
| DC Switch | Integrated | | | |
| DC Surge Protection | Type III(Type II Optional) | | | |
| AC Surge Protection | Type III(Type II Optional) | | | |
| AFCI | Optional | | | |
| Emergency Power Off | Optional | | | |
| Remote Shutdown | Optional | | | |
| Power Supply at Night | Optional | | | |
| General Data | | | | |
| Operating Temperature Range (°C) | -25~+60 | | | |
| Relative Humidity | 0~100% | | | |
| Max. Operating Altitude (m)*3 | 4000 | | | |
| Cooling Method | Natural Convection | | | |
| User Interface | LED, LCD (Optional), WLAN+APP | | | |
| Communication | WiFi,RS485 or LAN or 4G | | | |
| Communication Protocols | Modbus-RTU (SunSpec Compliant) | | | |
| Weight (kg) | 12.8 | | | |
| Dimension W×H×D (mm) | 350×410×143 | | | |
| Noise Emission (dB) | <25 | | | |
| Topology | Non-isolated | | | |
| Self-consumption at Night (W) | <1 | | | |
| Ingress Protection Rating | IP66 | | | |
| Anti-corrosion Class | C4 | | | |
| DC Connector | MC4 (4~6mm²) | | | |

| Technical Parameters | GW3000-DNS-30 | GW3600-DNS-30 | GW4200-DNS-30 | GW5000-DNS-30 |
|--|--|---------------|---------------|---------------|
| AC Connector | Plug and play connector (Max.6 mm ²) | | | |
| Environmental Category | 4K4H | | | |
| Pollution Degree | III | | | |
| Overvoltage Category | DC II / AC III | | | |
| Protective Class | I | | | |
| The Decisive Voltage Class (DVC) | PV: C AC: C Com: A | | | |
| Active Anti-islanding Method | AFDPF + AQDPF *4 | | | |
| Country of Manufacture(Only for Australia) | China | | | |

| Technical Parameters | GW6000-DNS-30 | GW5000-DNS-B30 | GW6000-DNS-B30 |
|---|---------------|----------------|----------------|
| Input | | | |
| Max. Input Power (W)*6 | 9,000 | 7,500 | 9,000 |
| Max. Input Voltage (V) | 600 | 600 | 600 |
| MPPT Operating Voltage Range (V) | 40~560 | 40~560 | 40~560 |
| MPPT Voltage Range at Nominal Power (V) | 195~500 | NA | 195~500 |
| Start-up Voltage (V) | 50 | 50 | 50 |
| Nominal Input Voltage (V) | 360 | 360 | 360 |
| Max. Input Current per MPPT (A) | 16 | 16 | 16 |
| Max. Short Circuit Current per MPPT (A) | 23 | 23 | 23 |
| Max.Backfeed Current to The Array (A) | 0 | 0 | 0 |
| Number of MPP trackers | 2 | 2 | 2 |
| Number of Strings per MPPT | 1 | 1 | 1 |
| Output | | | |
| Nominal Output Power (W) | 6,000 | 5,000 | 6,000 |
| Nominal Output Apparent Power (VA) | 6,000 | 5,000 | 6,000 |

| Technical Parameters | GW6000-DNS-30 | GW5000-DNS-B30 | GW6000-DNS-B30 |
|---|---|----------------|----------------|
| Max. AC Active Power (W)*2 | 6,600 | 5,000 | 6000 |
| Max. AC Apparent Power (VA)*2 | 6,600 | 5,300 | 6300 |
| Nominal Power at 40°C(W) (Only for Brazil) | 6,000 | 5,000 | 6,000 |
| Max Power at 40°C (Including AC Overload)(W)(Only for Brazil) | 6,000 | 5,000 | 6,000 |
| Nominal Output Voltage (V) | 220/230/240 | 220/230/240 | 220/230/240 |
| Output Voltage Range (V) | 196~311 (According to local standard) | | |
| Nominal AC Grid Frequency (Hz) | 50/60 | 50/60 | 50/60 |
| AC Grid Frequency Range (Hz) | 45~55 / 55~65 | 45~55 / 55~65 | 45~55 / 55~65 |
| Max. Output Current (A) | 28.8 | 24.0 | 28.8 |
| Max. Output Fault Current (Peak and Duration) (A) (at 4ms) | 55.8 | 44.5 | 55.8 |
| Inrush Current (Peak and Duration) (A) (at 10μs) | 39 | 39 | 39 |
| Nominal Output Current (A)*2 | 27.3 | 22.8 | 27.3 |
| Power Factor | ~1 (Adjustable from 0.8 leading to 0.8 lagging) | | |
| Max. Total Harmonic Distortion | <3% | | |
| Maximum Output Overcurrent Protection (A) | 52 | 42 | 52 |
| Efficiency | | | |
| Max. Efficiency | 97.9% | 97.9% | 97.9% |
| European Efficiency | 97.4% | 97.3% | 97.4% |
| CEC Efficiency | 97.4% | 97.3% | 97.4% |
| Protection | | | |
| PV String Current Monitoring | Integrated | | |
| PV Insulation Resistance Detection | Integrated | | |
| Residual Current Monitoring | Integrated | | |
| PV Reverse Polarity Protection | Integrated | | |
| Anti-islanding Protection | Integrated | | |
| AC Overcurrent Protection | Integrated | | |

| Technical Parameters | GW6000-DNS-30 | GW5000-DNS-B30 | GW6000-DNS-B30 |
|----------------------------------|-------------------------------------|----------------|----------------|
| AC Short Circuit Protection | Integrated | | |
| AC Overvoltage Protection | Integrated | | |
| DC Switch | Integrated | | |
| DC Surge Protection | Type III(Type II Optional) | Type III | Type III |
| AC Surge Protection | Type III(Type II Optional) | Type III | Type III |
| AFCI | Optional | | |
| Emergency Power Off | Optional | NA | NA |
| Remote Shutdown | Optional | | |
| Power Supply at Night | Optional | | |
| General Data | | | |
| Operating Temperature Range (°C) | -25~+60 | | |
| Relative Humidity | 0~100% | | |
| Max. Operating Altitude (m)*3 | 4000 | | |
| Cooling Method | Natural Convection | | |
| User Interface | LED, LCD (Optional), WLAN+APP | | |
| Communication | WiFi,RS485 or LAN or 4G | | |
| Communication Protocols | Modbus-RTU (SunSpec Compliant) | | |
| Weight (kg) | 13.4 | 12.8 | 13.4 |
| Dimension W×H×D (mm) | 350×410×143 | | |
| Noise Emission (dB) | <25 | | |
| Topology | Non-isolated | | |
| Self-consumption at Night (W) | <1 | | |
| Ingress Protection Rating | IP66 | | |
| Anti-corrosion Class | C4 | | |
| DC Connector | MC4 (4~6mm²) | | |
| AC Connector | Plug and play connector (Max.6 mm²) | | |
| Environmental Category | 4K4H | | |
| Pollution Degree | III | | |
| Overvoltage Category | DC II / AC III | | |
| Protective Class | I | | |
| The Decisive Voltage Class (DVC) | PV: C AC: C Com: A | | |
| Active Anti-islanding Method | AFDPF + AQDPF *4 | | |

| Technical Parameters | GW6000-DNS-30 | GW5000-DNS-B30 | GW6000-DNS-B30 |
|--|---------------|----------------|----------------|
| Country of Manufacture(Only for Australia) | China | | |

| Technical Parameters | GW5000-DNS-EU30 |
|--|---|
| Input | |
| Max. Input Power (W)* ⁶ | 7,500 |
| Max. Input Voltage (V) | 600 |
| MPPT Operating Voltage Range (V) | 40 - 560 |
| MPPT Voltage Range at Nominal Power (V) | NA |
| Start-up Voltage (V) | 50 |
| Nominal Input Voltage (V) | 360 |
| Max. Input Current per MPPT (A) | 16 |
| Max. Short Circuit Current per MPPT (A) | 23 |
| Max. Backfeed Current to The Array (A) | 0 |
| Number of MPP Trackers | 2 |
| Number of Strings per MPPT | 1 |
| Output | |
| Nominal Output Power (W) | 5,000 |
| Nominal Output Apparent Power (VA) | 5,000 |
| Max. AC Active Power (W)* ² | 5,000 |
| Max. AC Apparent Power (VA)* ² | 5,000 |
| Nominal Power at 40°C(W)(Only for Brazil) | 5,000 |
| Max Power at 40°C (Including AC Overload)(W) (Only for Brazil) | 5,000 |
| Nominal Output Voltage (V) | 220/230/240 |
| Output Voltage Range (V) | 196~311 (According to local standard) |
| Nominal AC Grid Frequency (Hz) | 50/60 |
| AC Grid Frequency Range (Hz) | 45~55 / 55~65 |
| Max. Output Current (A) | 22.8 |
| Max. Output Fault Current (Peak and Duration) (A) (at 4ms) | 44.5 |
| Inrush Current (Peak and Duration) (A) (at 10μs) | 39 |
| Nominal Output Current (A) | 22.8 |
| Power Factor | ~1 (Adjustable from 0.8 leading to 0.8 lagging) |

| Technical Parameters | GW5000-DNS-EU30 |
|---|--|
| Max. Total Harmonic Distortion | <3% |
| Maximum Output Overcurrent Protection (A) | 42 |
| Efficiency | |
| Max. Efficiency | 97.9% |
| European Efficiency | 97.3% |
| CEC Efficiency | 97.3% |
| Protection | |
| PV String Current Monitoring | Integrated |
| PV Insulation Resistance Detection | Integrated |
| Residual Current Monitoring | Integrated |
| PV Reverse Polarity Protection | Integrated |
| Anti-islanding Protection | Integrated |
| AC Overcurrent Protection | Integrated |
| AC Short Circuit Protection | Integrated |
| AC Overvoltage Protection | Integrated |
| DC Switch | Integrated |
| DC Surge Protection | Type III(Type II Optional) |
| AC Surge Protection | Type III(Type II Optional) |
| AFCI | Optional |
| Emergency Power Off | Optional |
| Remote Shutdown | Optional |
| Power Supply at Night | Optional |
| General Data | |
| Operating Temperature Range (°C) | -25~+60 |
| Relative Humidity | 0~100% |
| Max. Operating Altitude (m)*3 | 4000 |
| Cooling Method | Natural Convection |
| User Interface | LED, LCD (Optional), WLAN+APP |
| Communication | WiFi,RS485 or LAN or 4G or DI(Ripple Control or DRM)(Optional) |
| Communication Protocols | Modbus-RTU (SunSpec Compliant) |
| Weight (kg) | 12.8 |
| Dimension W×H×D (mm) | 350×410×143 |
| Noise Emission (dB) | < 25 |
| Topology | Non-isolated |
| Self-consumption at Night (W) | <1 |

| Technical Parameters | GW5000-DNS-EU30 |
|--|--|
| Ingress Protection Rating | IP66 |
| Anti-corrosion Class | C4 |
| DC Connector | MC4 (4~6mm ²) |
| AC Connector | Plug and play connector (Max.6 mm ²) |
| Environmental Category | 4K4H |
| Pollution Degree | III |
| Overvoltage Category | DC II / AC III |
| Protective Class | I |
| The Decisive Voltage Class (DVC) | PV: C AC: C Com: A |
| Active Anti-islanding Method | AFDPF + AQDPF ^{*4} |
| Country of Manufacture(Only for Australia) | China |

*1. For Malaysia GW4200-DNS-30 Nominal Output Power (W) and Nominal Output Apparent Power (VA) and Max. AC Active Power (W) and Max. AC Apparent Power (VA) is 4000

*2. For Netherland Max. AC Active Power (W) and Max. AC Apparent Power (VA) GW3600-DNS-30 is 3600, GW4200-DNS-30 is 4200; Max. Output Current (A) and Nominal Output Current (A) GW3600-DNS-30 is 15.7, GW4200-DNS-30 is 18.3

*3. For Australia Max. Operating Altitude (m) GW3000-DNS-30, GW3600-DNS-30, GW4200-DNS-30, GW5000-DNS-30, GW6000-DNS-30 is 3000.

*4. AFDPF: Active Frequency Drift with Positive Feedback, AQDPF: Active Q Drift with Positive Feedback

*5. For Chile Max. AC Active Power (W) & Max.Output Apparent Power(VA) GW3000-DNS-30 is 3000, GW3600-DNS-30 is 3600, GW4200-DNS-30 is 4200, GW5000-DNS-30 is 5000, GW6000-DNS-30 is 6000

For Braizil Max. AC Active Power: GW3000-DNS-30 is 3000, GW3600-DNS-30 is 3600, GW4200-DNS-30 is 4200, GW5000-DNS-30 is 5000, GW6000-DNS-30 is 6000, Max. AC Apparent Power (VA): GW5000-DNS-30 is 5300,GW6000-DNS-30 is 6300

*6. For Brazil Max. Input Power (W), GW3000-DNS-30 is 5400, GW3600-DNS-30 is 6480, GW4200-DNS-30 is 7560, GW5000-DNS-30 is 9000, GW6000-DNS-30 is 10800, GW5000-DNS-B30 is 9000, GW6000-DNS-B30 is 10800

*7. For England Max. Output Current(A) & Nominal Output Current(A) GW3600-DNS-30 is 16A

*8. For England Max. AC Active Power (W) & Max. AC Apparent Power (VA) GW3600-DNS-30 is 3600

11 Term Explanation

Overvoltage Category Definition

Category I: Applies to equipment connected to a circuit where measures have been taken to reduce transient overvoltage to a low level.

Category II: Applies to equipment not permanently connected to the installation. Examples are appliances, portables tools and other plug-connected equipment.

Category III: Applies to a fixed equipment downstream, including the main distribution board. Examples are switch gear and other equipment in an industrial installation.

Category IV: Applies to equipment permanently connected at the origin of an installation (upstream of the main distribution board). Examples are electricity meters, primary over-current protection equipment and other equipment connected directly to outdoor open lines.

| Parameters | Level | | |
|---------------------|----------|------------|-----------|
| | 3K3 | 4K2 | 4K4H |
| Temperature Range | 0~+40°C | -33~+40°C | -33~+40°C |
| Moisture Parameters | 5% - 85% | 15% - 100% | 4% - 100% |

Environment category definition

Outdoor: Ambient Temperature: -25~+60°C, applied to Pollution Degree 3 environment.

Indoor Unconditioned: Ambient Temperature: -25~+40°C, applied to Pollution Degree 3 environment.

Indoor conditioned: Ambient Temperature: 0~+40°C, applied to Pollution Degree 2 environment.

Pollution degree definition

Pollution Degree I: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.

Pollution Degree II: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.

Pollution Degree III: Conductive pollution occurs, or dry, non-conductive pollution occurs, which becomes conductive due to condensation, which is expected.


Pollution Degree IV: Persistent conductive pollution occurs, for example, the pollution caused by conductive dust, rain or snow.



Official Website

GoodWe Technologies Co.,Ltd.

 No. 90 Zijin Rd., New District, Suzhou, 215011, China

 www.goodwe.com

 service@goodwe.com



Contact Information